

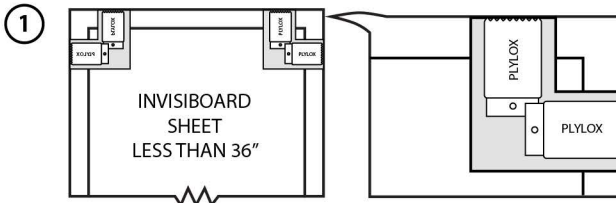



# INVISIBOARD - CLIP INSTALLATION

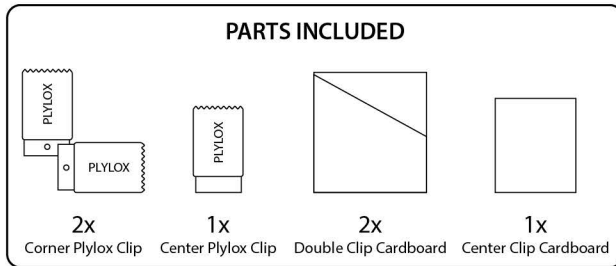

- Use Corner Clips at the top of the opening on the exterior
- The "PLYLOX" label is the front of the clip, and should always face the exterior
- Place over the top right and left corners of the InvisiBoard Sheet before sliding into window frame
- Use the supplied card stock to protect the surface of the frame/opening from damage as the Clips are slid into place

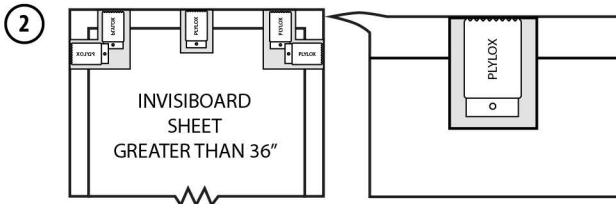

- Use Center Clip (for extra support) when the opening is larger than 36"
- Place Center Clip between the two Corner Clips, equally distant, at the top of the InvisiBoard Sheet
- The "PLYLOX" label is the front of the clip, and should always face the exterior
- Use the supplied card stock to protect the surface of the frame/opening from damage as the Clips are slid into place

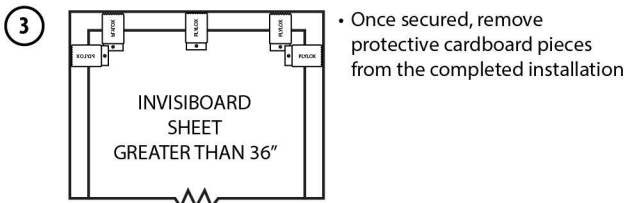


- Once secured, remove protective cardboard pieces from the completed installation

## Clip Installation Requirements by Window Type


A single window requires a minimum of 2 installation kits. Use in combinations that best fit the window type and condition of the frame.

- Clips secure InvisiBoard to exterior top corners of an opening (inset frames only)
- Use Clips in conjunction with Angles and/or Blocks as needed
- Use Center (single) Clip as extra support for openings that exceed 36" (width)
- Use Corner Clips on the top corners of the InvisiBoard Sheet only; clips are not to be secured at the bottom
- Applies to openings with a minimum inset of at least 2" depth from the exterior wall to face of the window frame


<b>Any window type, &gt; 36 inches (width)</b>	<ul style="list-style-type: none"> <li>• Install Center Clip between top right and top left corners of the InvisiBoard Sheet</li> <li>• Secure top left and top right corners using Corner Clips from exterior of the opening</li> <li>• Bottom can be secured using Angles or Blocks</li> </ul>
<b>Single Hung, bottom broken</b>	<ul style="list-style-type: none"> <li>• Clear board entire opening</li> <li>• Secure top left and top right corners using Corner Clips from exterior of the opening</li> <li>• Bottom can be secured using Angles or Blocks</li> </ul>
<b>Crank Window, bottom broken</b> <i>(case by case)</i>	<ul style="list-style-type: none"> <li>• Clear board stand-alone openings entirely, where bottom pane is broken/missing</li> <li>• Secure top left and top right corners using Corner Clips from the exterior of the opening</li> <li>• Bottom can be secured using Angles or Blocks</li> </ul>
<b>Crank Window, top broken</b> <i>(case by case)</i>	<ul style="list-style-type: none"> <li>• Clear board broken pane only</li> <li>• Secure top and bottom of InvisiBoard Sheet using interior hardware (Angles or Blocks)</li> </ul>

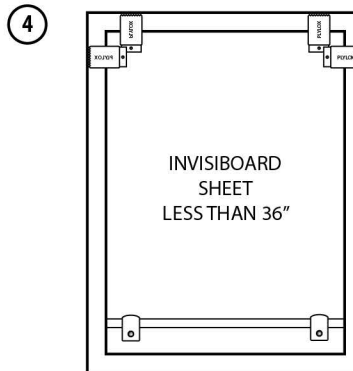

Clip & Block Installation

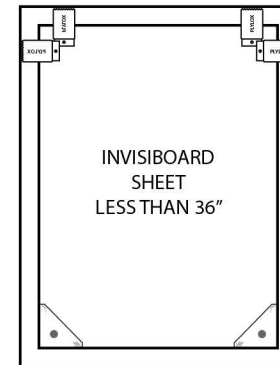

Clip & Angle Installation

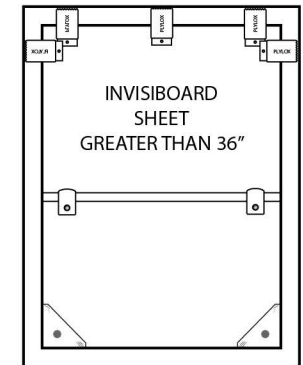

Clip, Block, & Angle Installation

For a detailed video demonstrating the InvisiBoard Fastening System, scan the QR code to the right.

YouTube: Install InvisiBoard

